

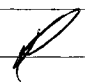
# Work Order ID 86868

\*86868\*

Page 1

July-06-12 3:18:37 PM

Item ID: D205-634-011 Accept \*N900040100\* Setup Start \*NS1\*  
 Revision ID: Stop \*NS2\*  
 Item Name: Skidtube  
 Start Date: 7/06/12 Start Qty: 1.00 \*1\* Cust Item ID:  
 Required Date: 8/10/12 Req'd Qty: 1.00 \*1\* Customer:  
 Reference:

Approvals: Process Plan:  Date: 2-07-10 Tooling: \_\_\_\_\_ Date: \_\_\_\_\_ Run Start \*NR1\*  
 QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_ Stop \*NR2\*

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
<b>Draw Nbr</b>	<b>Revision Nbr</b>								
DSI9468	A								
IIN D205-634	G								
100		0.00							
<b>*100*</b>									
DC	<b>Memo</b>	0.00							
Document Control	Photocopy bluefile & type labels per PPP D205-634-011 CHG 010								
110	Pick Kit	0.00							
<b>*110*</b>									
Packaging	<b>Memo</b>	0.00							
Packaging									

1 9/10/12 12-7-31  
1/12/12

12/1/12 (1)

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

**Work Order ID 86868****\*86868\***

Page 2

July-06-12 3:18:37 PM

Item ID: D205-634-011

Accept

**\*N900040100\***Setup Start **\*NS1\***

Revision ID:

Stop **\*NS2\***

Item Name: Skidtube

Start Date: 7/06/12 Start Qty: 1.00

**\*1\***

Cust Item ID:

Required Date: 8/10/12 Req'd Qty: 1.00

**\*1\***

Customer:

Reference:

Approvals: Process Plan: \_\_\_\_\_ Date: \_\_\_\_\_ Tooling: \_\_\_\_\_ Date: \_\_\_\_\_

Run Start **\*NR1\***

QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_

Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
120	QC4- 100% Inspect kits for completeness	0.00							
<b>*120*</b>									
QC	Memo	0.00							12/08/12
Quality Control									
130		0.00							
<b>*130*</b>									
Packaging	Memo	0.00							
Packaging	Identify and pack for shipping as per PPP D205-634-011								
	Location: <u>073</u>								
	PPP rev: _____								
140	QC21- Final Inspection - Work Order Release	0.00							
<b>*140*</b>									
QC	Memo	0.00							
Quality Control									

12/08/12

**Dart Aerospace Ltd**

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_  
 Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

# Picklist Print

July-06-12 3:18:37 PM

Page 1

Work Order ID: 86868

Parent Item: D205-634-011

Parent Item Name: Skidtube

Start Date: 7/06/12

Required Date: 8/10/12

Start Qty: 1.00

Required Qty: 1.00

Comments: IPP Rev:P02.08.28Removed QC5 from Step 5KJ  
 IPP Rev:Q 08-08-12 now @ chg 006 (DSI 9417) DD verf:EC  
 IPP Rev R 09.01.28 now chg 007 DSI9417 revB EC verf:DD IPP Rev:S 10.12.01 as per chg008  
 DD verf:EC IPP REV:T 12.01.23 AS PER ECN11-684 VERF:EC

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
D205-634-041 Replacement Skidtube		Manufactured	No			110	Each	1.0000	1	1			

86420

Location	Loc Qty	Loc Code
FG	1	
56133	0	
56134	0	
56135	0	
56136	0	
56137	0	
56565	0	
56566	0	
78063	1	

K10003  
 Saddle, D205-634-011

Manufactured No 110 Each 1.0000

86389

Location	Loc Qty	Loc Code
PKG	1	
57963	0	
81667	1	

**Dart Aerospace Ltd**

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries